

Lockable Sealed Glove Box Door (Model GD-3R) Installation Instructions

Congratulations on the purchase of your GD-3R Glove Box Door for the 2019 to current Electra Glide Standard or 2014 to current Police Bike. This product will give you more storage options and added convenience. The installation is straightforward and easy. If you have any questions, email support@eglidegoodies.com.

Inventory: The kit includes the following:

1.
 - A. Glove box door assembly w/gasket (1)
 - B. Lock or knob assembly (1)
 - C. Cam (1)
 - D. Keys, if applicable (2)
 - E. Self-tapping screw (2)
 - F. Black screw (2)
 - G. Shim washer (1, if needed)
 - H. Spacer (2)
 - I. Installation instructions



(GD-3R shown mounted, glove box not included)

Glove Box Door Installation:


2. Turn the handlebars to the left. Position the GD-3R glove box door assembly into the glove box opening with the two attachment-arms at the bottom; lock or knob position on the top. Close the top door then center the position of the door assembly in the opening. Slowly open the door (for locks use the supplied key as the handle).

Tip: You may apply some transparent tape around the edge of the glove box to aid in prevention of scuff marks during install.



3. Holding the door in place with one hand, insert one of the self-tapping screws into a hole. Pay attention to center the screw in the hole with a screw

driver then press and turn to slowly tap a shallow pilot hole. Repeat the procedure for the other side. Tip: Helps to use a magnetic screw driver if available.

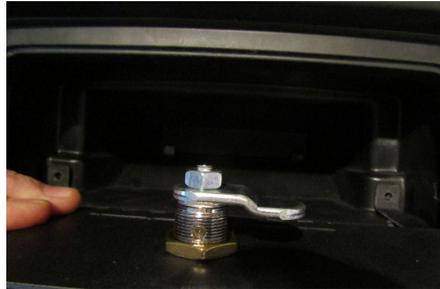

4. Remove the two self-tapping screws and door assembly and remove any plastic burrs around the pilot holes. Reinsert and center the glove box door assembly.
5. Slide and align each of the spacers underneath the holes in the attachment-arms. Reinsert two regular screws through the attachment-arms and spacers and into the pilot holes then tighten about half way.
6. Close the glove box door and if needed, reposition to center the door assembly.
7. Now open the door and holding it to maintain the position, go ahead and tighten the screws (do not over tighten).



Gasket Not Shown

Glove Box Door Operation:

8. Check opening and closing the Glove Box Door. For the GD-3R w/lock, insert a key and check the locked and unlocked positions.

Barrel lock:

- To Unlock or Open: Insert the key then push the key slightly as you turn the key to unlock.
- To Lock or Close: Close the door then push the key slightly as you turn the key to lock. Remove the key.

Flat key lock:

- To Unlock or Open: Insert the key and turn. The key can be removed in the locked or unlocked position.
- To Lock or Close: Close the door then turn the key. Remove the key.

If the doors close too tightly, not tightly enough or the latch cam does not clear when you turn the lock or knob, you can fine tune this by adding the washer to shim the cam or by making small adjustments in the bend of the latch cam (arm) at the back of the door.

If you selected a knob option, you can select the closed-door knob orientation you prefer, either vertical or horizontal, by a simple adjustment of the cam.

For GD-3R kits with locks you will have two identical keys. A good idea is to keep one spare in the Tour-Pak or saddlebag.

Caution!

You should not ride the motorcycle while opening, using or closing the glove box with door! You should safely pull off the road and come to a complete stop at a location away from moving traffic prior to use.

We welcome your feedback! Please email your comments about this product or installation to support@eglidegoodies.com.

Harley-Davidson, Electra Glide and Tour-Pak are registered trademarks of Harley-Davidson, Inc. eGlideGoodies has no affiliation with Harley-Davidson, Inc. The use of these terms is for identification purposes only.